































































• Use palm to rotate top on replacement assembly to left stop and insert into body with left stop at the same point you removed the original from use mark made if needed • Tighten the cap clockwise • Turn on zone and check for leaks • Make final adjustment to right stop and spray distance • Observe head for several cycles to ensure coverage

























